



# Deltadeck®

## Instruction Manual

- Instructions and equipment in accordance with BS EN 1298.
- Manufactured to certified quality system ISO 9001:2008 and BSOHSAS 18001:2007.
- This guide should be used in conjunction with a suitable Risk Assessment and Method Statement (by user) relative to the project to be undertaken.
- Please ensure you read and fully understand the guide, follow the content during assembly and ensure that the unit is complete prior to use.
- This manual must be made available to the user / assembler at all times.



Turner Access Ltd  
65 Craigton Road, Glasgow  
G51 3EQ. UK

T: +44 (0) 141 309 5555  
F: +44 (0) 141 309 5436

[www.turner-access.co.uk](http://www.turner-access.co.uk)  
[enquiries@turner-access.co.uk](mailto:enquiries@turner-access.co.uk)

TA3/01/50/11\_Iss1Rev0 Rev.No.Jun14/Rev0

## GENERAL SAFETY & MAINTENANCE NOTES

1. Check all components are available and operational.
  2. Inspect the unit components for signs of damage or incorrect functioning prior to use. Damaged or incorrect components (or components showing signs of excessive wear) must not be used and should be returned to your local supplier. Once the unit is assembled, use the **CHECKLIST** below.
  3. The Deltadeck® is designed for use on flat, level surfaces. Check that the ground is capable of supporting the weight of the Deltadeck® and the equipment being used.
  4. If the Deltadeck® is being used outdoors and is exposed to significant wind forces, it should be tied or secured to a fixed structure. For frequent outdoor use, it is recommended that the inspection and maintenance regimes take that fact into account.
  5. The safe working load of the Deltadeck® platform is 200 kg uniformly distributed; 200kg total load per unit. One person only working on unit at any one time.
  6. Castors must be locked when unit is in use.
  7. Ensure that the platform is free of persons and equipment, and that brake locks are off prior to movement. Beware of soft or uneven ground and overhead obstructions.
  8. The Deltadeck® should be manoeuvred by lifting the unit at the feet and pulling in the required direction. Using the castors to 'wheel' the unit makes it easier to control.
  9. Always beware of live electrical apparatus, cables or moving parts of machinery.
  10. To prevent accidental injury ensure safe positioning of hands and fingers when assembling and dismantling.
  11. The Deltadeck® should always be climbed with Operator's Centre of Gravity towards the platform.
  12. Never jump onto platforms. Ensure platform is free of debris.
  13. Do not use hoisting arrangements on Deltadeck® unit. When raising or lowering components always work within the unit base.
  14. Ensure guardrails and gates are locked and secure when platform is in use.
  15. Deltadeck® units are not designed to allow them to be lifted or suspended.
  16. Never use this equipment if you are ill, feeling tired, or under the influence of alcohol or drugs.
  17. Wear practical, protective clothing, gloves and footwear.
  18. Avoid loose garments and jewellery that could catch in moving parts.
  19. Ensure the work area is well lit and ventilated, if in doubt, ask about lighting and ventilation equipment from your local supplier.
  20. Keep children, animals and bystanders away from the work area. Cordon off an exclusion zone using cones and either barriers or tape, available from your local supplier. Make sure that anyone in the immediate work area is warned of what you are doing.
  21. Do not use boxes, ladders or other such means to gain additional height at the platform.
  22. Care should be taken when using power tools, wash jets or other such tools which can cause a lateral force on the Deltadeck®.
  23. Ensure that telescopic leg is free from contaminants and lubricated at regular intervals.
- This equipment should be used by a suitably trained person who has read and understood these instructions. Anyone with health/disability issues, should seek expert advice before using it.

### CHECKLIST PRIOR TO USE

The Deltadeck® must be checked after assembly, prior to use and after any event that may have affected the integrity of the unit. Use the checklist below.

- ☐ Castors Locked
- ☐ Adjustable legs and levers located and secure
- ☐ Guardrails fitted and secure
- ☐ Platform is level and placed on a level and suitable surface

If a box has not been ticked, do not use the unit until the fault is rectified. Where a fault is found, access to the unit must be stopped.

### SAFE WORKING LOAD

The safe working load is 200 Kg and must not be exceeded.

### EQUIPMENT CARE

The equipment has design limits that should not be exceeded.

If the equipment appears to be unsuitable for the required job then assume that it is not the correct tool for the job. Contact your local supplier.

Keep the equipment clean by regular cleaning rather than at the end of the hire period.

When not in use, store the equipment in a clean and dry environment, safe from potential theft.

### TRAINING


These instructions do not take the place of proper training. Consult your supplier for details of specific training courses for users of low level access units.

## DELTADECK® ASSEMBLY

It is essential to familiarise yourself with the equipment before commencing assembly procedures. The Platform must be assembled before use. To assemble the platform, take the unit to the work area.




1. Lift one end of platform and simultaneously pull the leg assembly out until legs automatically lock in place.
2. Repeat operation to other side (ensuring locking mechanisms are set at the same height).

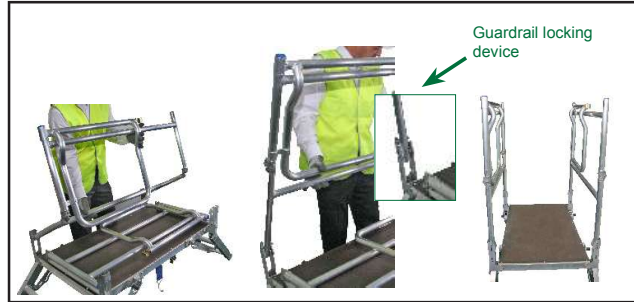

3. Undo retaining straps and lift one side guardrail section.
4. Rotate top section of guardrail through 180 degrees to allow both sections of guardrail to be locked together (at Guardrail locking device).
5. Double check that locking positions at base of the guardrail are firmly secured.
6. Repeat for opposing side guardrail.



7. Place end guardrail / gate as shown.

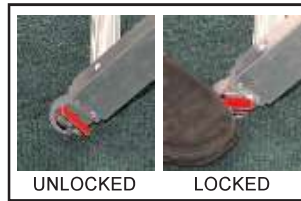

8. Ensure that castors are locked.
9. Once castors have been locked access can be gained to platform.



10. When accessing platform, keep body's centre of gravity towards platform.
11. Once access has been gained, immediately close guardrail behind you to provide protection to all 4 elevations of platform.

## PLATFORM HEIGHT

The platform height can be adjusted by two methods.

### 1. Leg Adjustment Lever

There are 3 positions in which the lever can be placed. Each position has the effect of adjusting the height of the platform and either increasing or decreasing the footprint of the unit. Release leg adjustment lever and pull platform toward you until lever engages in either position 1, 2 or 3.



### 2. Adjustable Leg

The platform height is also adjustable by extending the telescopic leg (3 positions). To extend the leg, depress the leg retaining device and extend leg to the next position (leg retaining device will automatically relocate). If further extension is required, then repeat the previous step until final position is reached.



### DISMANTLING THE DELTADECK®



1. Open both end guardrails and rotate top half of side guardrail through 180 degrees (reversal of assembly procedure) ensuring that the guardrail chosen has roll pin located in the lowest slot of guardrail bracket (this enables unit to be folded in correct sequence).




2. Disengage base of guardrail and lay guardrail unit onto platform.
3. Repeat for other side guardrail.
4. Attach the retaining straps.



5. Retract all adjustable legs to their minimum adjustment by reversing steps taken during assembly procedure.



6. Pull leg adjustment levers and locate legs under platform.
7. Repeat for opposing end.

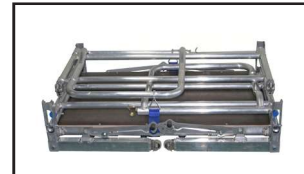


8. Ensure legs are located in leg retaining clips.
9. Unit is dismantled.

### TRAINING

These instructions do not take the place of proper training. Consult your supplier for details of specific training courses for users of low level access units.

### COMPONENT BREAKDOWN

1. Side Guardrails
2. End Guardrails
3. Guardrail Locking Device
4. Guardrail Bracket
5. Retaining Strap
6. Leg Adjustment Lever
7. Adjustable Leg
8. Castor

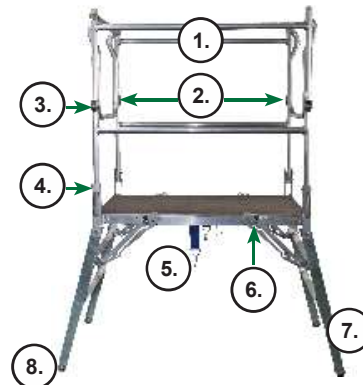

### REMEMBER

**DO NOT OVER REACH THE GUARDRAILS.**

**THE DELTADECK® IS AN ALTERNATIVE TO STEP LADDERS AND SHOULD BE USED WITH THIS IN MIND.**

**CARE SHOULD BE TAKEN WHEN ACCESSING OR EGRESSING THE PLATFORM.**

For Technical advice (or further information), please contact:  
Turner Access Ltd, 65 Craigton Road, Glasgow, G51 3EQ. Tel: +44 (0) 141 309 5555 Fax: +44 (0) 141 309 5436  
Email: [enquiries@turner-access.co.uk](mailto:enquiries@turner-access.co.uk)