

CON-STD-01

Assembly Guide

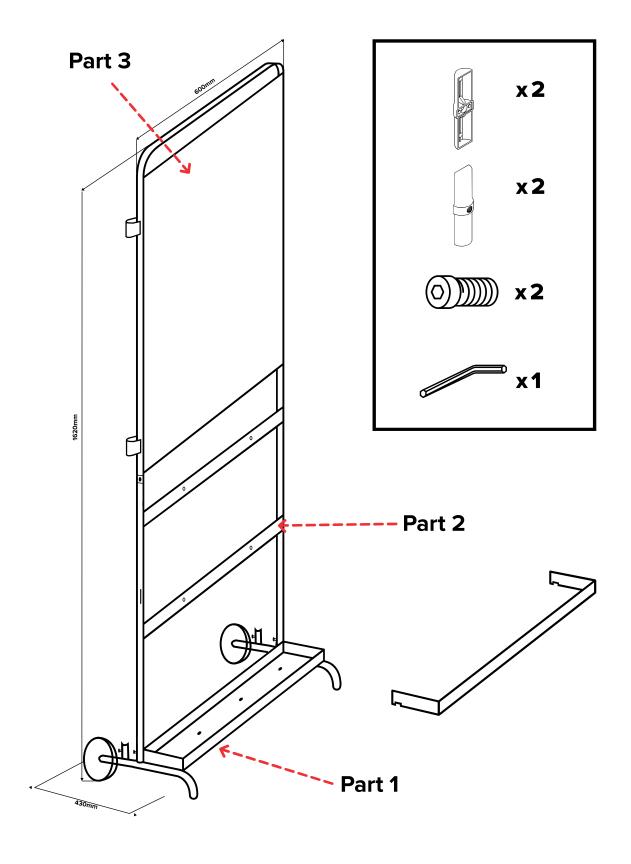


Assemble Lower Section

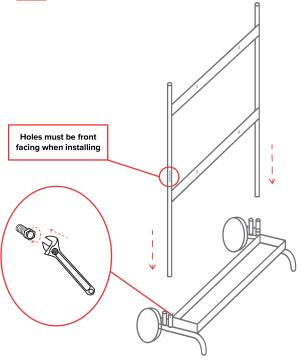


- 1. When putting together **Part 2** into **Part 1**, ensure that the holes on **Part 2** are front facing.
- 2. Place **Part 2** into **Part 1**. Tighten the bolts at the bottom of **Part 1** using a spanner.

Assemble Upper Section

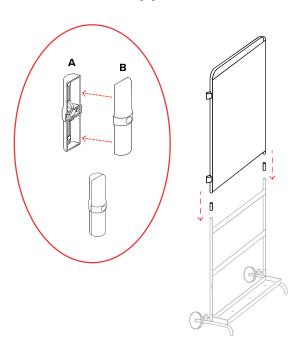


- 3. Take **Part A** and **Part B** and together, place them into each side of part 2.
- 4. Place Part 3 over the expanders onto Part 2.

Secure Sections

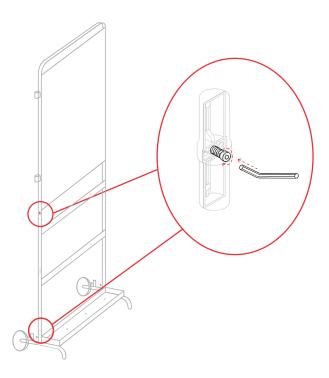

 Once all parts are in position, tighten all expanders (A+B) with an allen key to secure the complete frame.

Assemble Upper Section

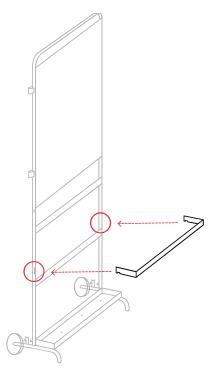

6. Optional – hook the fire extinguisher protector frame into either side of **Part 1.**